

P5070SB

HMI with 7" TFT LCD display


- ♦ Cortex 600 MHz Processor
- ♦ Built-in Power Isolation
- ♦ Built-in PLC Expansion function
- ♦ PCB coating for Stability in Harsh Environment
- → Fan-less Design for Cooling Method
- → High Noise Immunity Design for Industrial Application

 
	Panel Size	7" TFT (16:9)		Serial 1 (DB-9)	RS-232 (2W)	
	Panel Resolution	800 x 480	I/O Port	Serial 2 (Terminal Blocks)	RS-422/485 (4W) RS-485 (2W)	
	Brightness	400 (cd/m²)		RS-422/485 Isolation	_	
Display	Contrast Ratio	500		Ethernet	-	
	Backlight Type	LED		USB HOST	USB2.0 x 1	
	Backlight Life Time	30,000 Hrs		USB Device	USB2.0 x 1(USB Type C)	
	Colors	16.7M		Micro-SD Slot	-	
	LCD Viewing Angle	70/50/70/70 (T/B/L/R)		Audio Output	-	
T .	Type 4-wire Resistive Type Video Input –	-				
Touch	Accuracy	X axis±2%; Y axis±2%		Termination Switch	Yes	
Mamagu	Flash	256MB		PLC Extension	Yes	
Memory	Memory RAM 1	128MB	I/O Extension	HMI Extension	Yes	
Contain	СРИ	32 bit RISC Cortex 600MHz		Wireless Module	Yes	
System	RTC	Yes		Power Input Range	14 ~ 32VDC	
Dimension	Dimensions W x H x D	186.2 x 137.6 x 27.7 (mm)	Power	Power Isolation	Yes	
/Weight	Cut-out	175.0 x 130.0 (mm)		Isolation Resistance	Exceed $50M\Omega$ at $500VDC$	
/ vveignt	Weight	465 (g)		Power Consumption	12.48W (@24VDC)	
	Protection Structure	Front panel: IP65 / Rear Case	e : IP20			
	PCB Coating Yes					
	Operating Temp	ing Temp 0~50°C				
	Storage Temp	-20 ~ 60°C				
Environment	Relative Humidity	10%~90% (40°C Non-condensing)				
	Withstand Voltage	500VAC/20mA/1 Min. (between charger & FG terminals)				
	Vibration Endurance	5 to 9Hz Half-amplitude: 3.5r 9 to 150 Hz Constant acceler 3 directions of X, Y, Z: 10time	ation: 19.6m/s2 (2			
Software	FvDesigner V1.5.81	or later versions				
Certification	CE, UL					

 
Contact: FATEK Automation Corporation Tel: +886-2-2808-2192 WEB: http://www.fatek.com


Fax: +886-2-2809-2618 E-MAIL: sales@fatek.com

 
Dimensions Drawing

 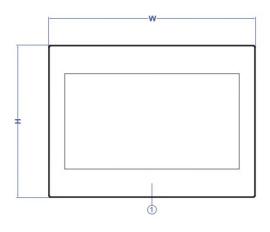






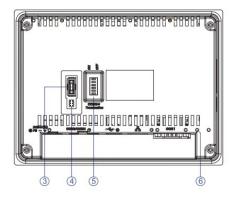






W	186.2 mm
Н	137.6 mm
D	27.7 mm


1	Power Indicator Light
2	Fixing hole
3	Expansion module connector
4	HB1 P2C Connector
5	COM3/COM4 Termination Switch
6	HB1 PLC Screw Hole
7	Power Terminal Block
8	COM3/COM4 Pluggable Terminal Block
9	USB Connector
10	Ethernet RJ45 Connector (for Ethernet/ Multifunction model)
11)	COM1:DB-9 Male Connector*
12	Audio Phone Jack (for Multifunction model)
13	Micro-SD Card Slot (for Multifunction model)
14	TYPE C Connector

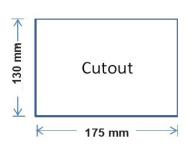

512	527 537	542 552 5	67 577
PIN#	COM3 [RS-422]	COM3 [RS-485]	COM4 [RS-485]
1	NC	NC	DATA+
2	NC	NC	DATA-
3	GND	GND	GND
4	RX+	NC	NC
5	RX-	NC	NC
6	TX+	DATA+	NC
7	TX-	DATA-	NC

Pluggable Terminal Block

	DB-9 Male Connector	
O O O O O O O O O O O O O O O O O O O		
PIN#	COM1 [RS-232]	
1	[RS-232] NC*1	
2	RX	
3	TX	
	NC	
4	OND	
5	GND	
	NC NC	
5		
5	NC	

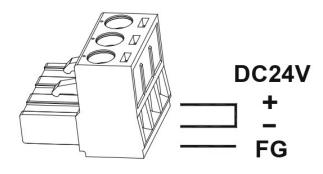

- Be sure to connect the ground FG terminal to a class-3 ground (Ground resistance should not exceed 100Ω). Try to make the ground wire as short as possible.
- Use 22 14 AWG (0.6 1.5 mm²) wire for the power connections.




Please use solid wires between 22AWG and 14AWG. Maximum 300V and rated temperature to 105°C for input power pins.




▲ Caution

Make sure the HMI is properly grounded to prevent electrical shock, fire or malfunction.

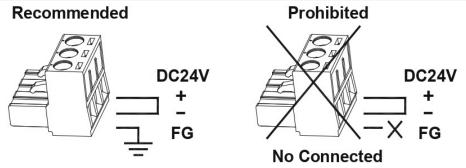

HMI unit and other equipment should have the same electrical grounding (reference voltage level), otherwise communication errors may occur.

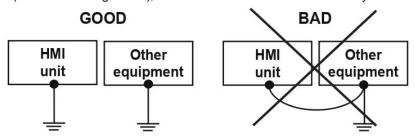

1.3 Operation

- Do not use sharp objects or excessive force to press the touch screen. This may damage the touch screen. Screen protector can be applied to the HMI screen to portect if from damage, for ordering information, please contact our sales department.
- Do not use the output signal of the device as any safety function or system emergency stop. It may result in personal injury or equipment damage if a malfunction of the touch occurs.

1.4 **Maintenance and Service**

- The agreed guarantee applies.
- Only qualified personnel should make repairs and perform maintenance.
- Disconnect the device from the power supply before carrying out cleaning or maintenance.
- Clean the front panel with a soft cloth and mild detergent.
- Please use original replacement spare parts or accessories.

Contact: FATEK Automation Corporation Tel: +886-2-2808-2192 WEB: http://www.fatek.com P5070SB DataSheet 210510